


No	Description		Part/Pièce
1	O-ring (16mm x 2.0mm)	Joint torique (16mm x 2.0mm)	FCORA1019
2	Spout connector kit	Ensemble de raccord du bec	FCKTS9050
3	Test cap	Bouchon d'essai	FCOTH9044
4	Threaded sleeve	Douille filetée	N/A
5	Ceramic cartridge (35mm)	Cartouche céramique (35mm)	FC9M6
6	O-ring (15mm x 2.5mm)	Joint torique (31.2mm x 1.9mm)	FCORA1012

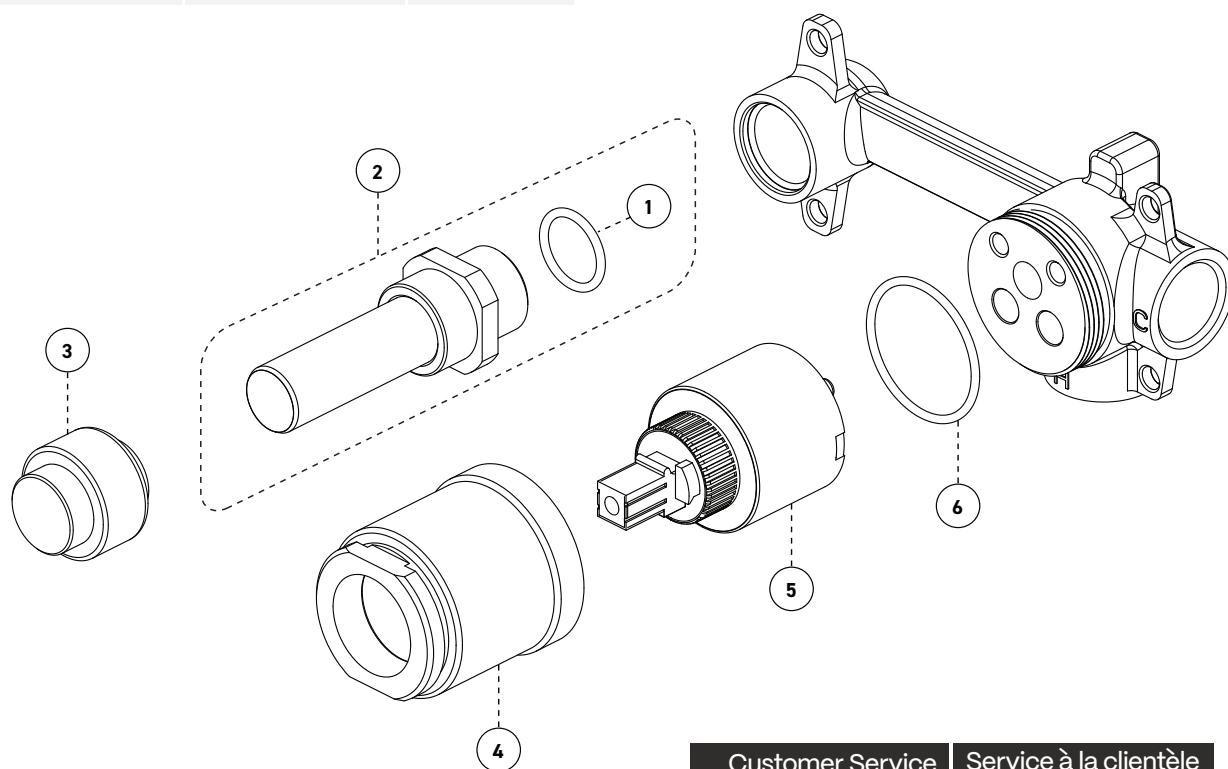


Customer Service	Service à la clientèle
Monday to Friday: 8 a.m. – 4:30 p.m. E.S.T.	Lundi au vendredi: 8 h 00 à 16 h 30 H.N.E.
Tel: 1-800-361-5960	Fax: 1-888-533-8313
info@belangerfaucets.com	

Replacement parts are available on order
Pièces de remplacement disponibles sur commande

Rough-in INSTALLATION PRIMAIRE | 12RBR

LAVATORY SINK FAUCET – WALL MOUNT INSTALLATION – ROUGH-IN
INSTALLATION PRIMAIRE – MURALE – ROBINET POUR LAVABO

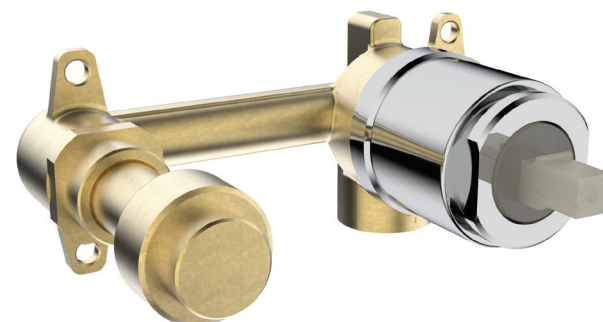

CARE INSTRUCTIONS

Rinse the product with clear water.
Dry the product with a soft cloth.

DO NOT:

Use abrasive cleansers, cloths, or paper towels. Use any cleaning agents containing acid, polish, wax, alcohol, ammonia, bleach, solvent or any other corrosive or harsh chemical cleansers.

INSTRUCTIONS D'ENTRETIEN

Rincer le robinet avec de l'eau claire et l'essuyer avec un tissu doux.

À NE PAS FAIRE:

Utiliser des tissus ou essuie-tout abrasifs, produits nettoyants contenant de l'acide, agent polisseur, cires, alcool, ammoniac, eau de Javel, solvants ou tout autres produits chimiques corrosifs.

For warranty and to register your product
Garantie et enregistrement de votre produit

belangerfaucets.com





IMPORTANT


Bélanger recommends using a professional plumber for all installation and repair. Please inform yourself about the Canadian Plumbing Code's regulations and your local municipality plumbing codes before installation. The Canadian Plumbing Code requires the installation of surge arresting devices to eliminate water hammering.

ALLOW AN ADEQUATE OPENING IN ORDER TO EASILY ACCESS CONNECTIONS OR OTHER PLUMBING DEVICES FOR MAINTENANCE OR REPAIR.


Bélanger recommande de faire appel à un plombier compétent pour l'installation et la réparation de ce produit. Veuillez vous informer des différentes règles du Code Canadien de plomberie et des exigences de votre localité avant l'installation. Le Code Canadien de plomberie exige l'installation d'un dispositif anti-bélier afin d'amortir les coups de bélier dans la plomberie. PRÉVOIR UNE OUVERTURE SUFFISANTE POUR FACILITER L'ACCÈS AUX RACCORDEMENTS OU À TOUT AUTRE DISPOSITIF DE PLOMBERIE EN VUE DE L'ENTRETIEN OU DE LA RÉPARATION.

TECHNICAL DRAWING - DESSIN TECHNIQUE

12RBR

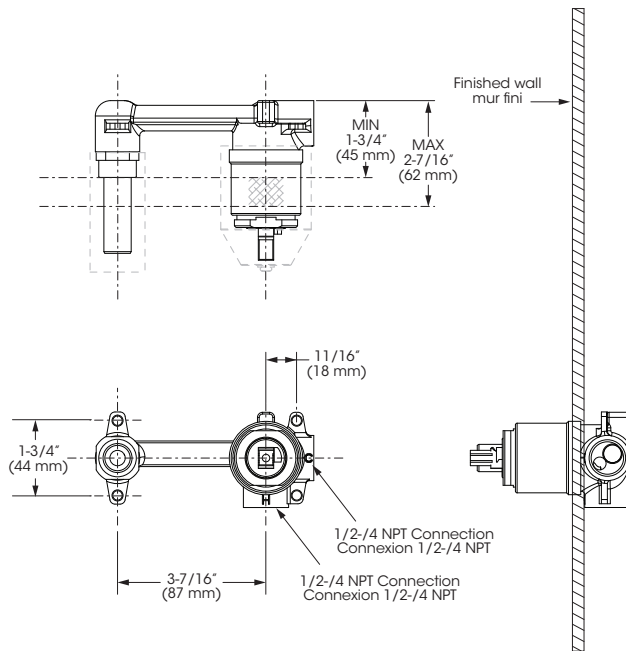



RECOMMENDED TOOLS / OUTILS RECOMMANDÉS



The model shown in the installation steps may differ from the one in box however connection type and installation steps are the same.

Le modèle démontré dans les étapes d'installation peut différer du produit en boîte, mais le type de connexions et d'installation demeure le même.

INSTALLATION STEPS - ÉTAPES D'INSTALLATION

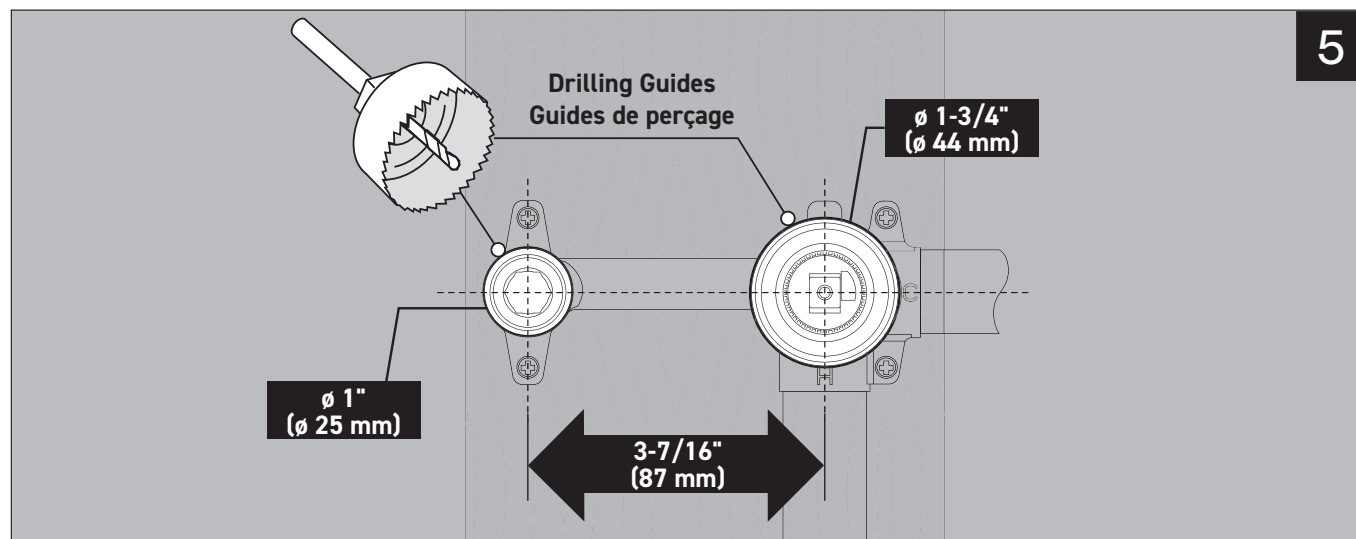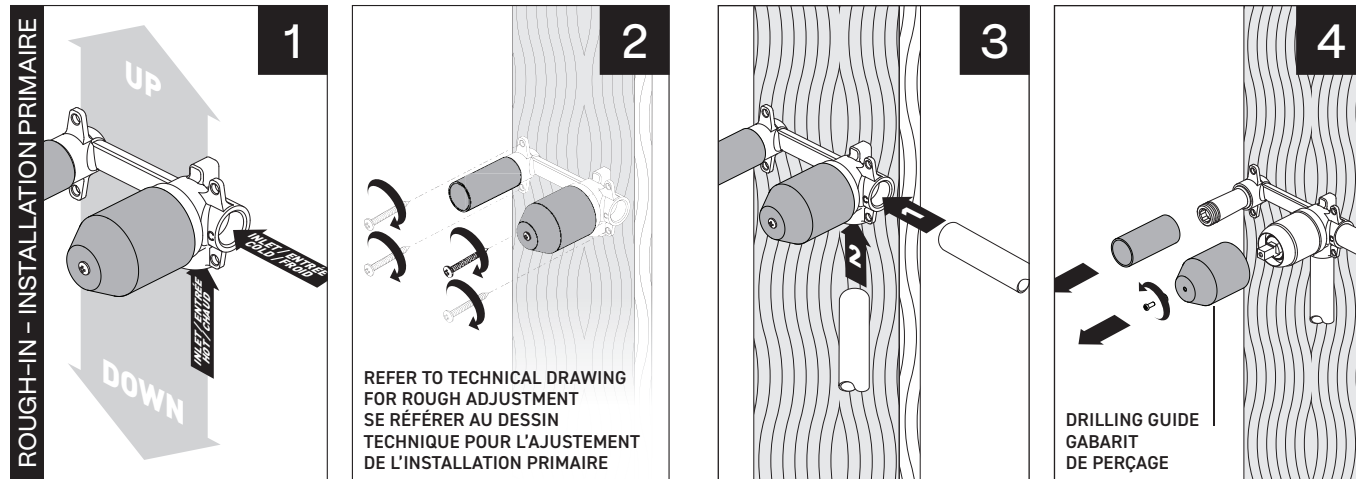

VIEW FROM TOP / VUE DE HAUT



FINISHED WALL
INSTALLATION ADJUSTMENT

AJUSTEMENT POUR L'INSTALLATION
DU MUR DE FINITION

